



- 1° Remove the part from the packaging and with the lamp base, make a mark for the fixing hole in the ceiling
- 2° Fix the brackets to the lamp base using the screws and nuts, adjust them so that the rim is supported at the three points
- 3° Carry out the electrical installation

- 4° Fix the lamp base to the ceiling with the plugs and screws that come with the product
- 5° Place the lamps (DO NOT USE INCANDESCENT LAMPS)

- 6° Remove the protective film from the diffuser and fit it inside the ARO.  
 Never use alcohol to clean the diffuser
- 7° With the base of the lamp already fixed to the ceiling, fit the frame. Support the two supports so that the third is in the direction of the tear.
- 8° Turn the cupula making sure that it is supported on the base of the lamp by the 3 supports

**ML-2217** Ø15 3/4" x 4 1/8" 3xE26 120/277V **Power Max:** 11W **Weight:** 5.54 lbs  
**ML-2218** Ø23 5/8" x 4 1/8" 6xE26 120/277V **Power Max:** 11W **Weight:** 6.11 lbs

### Attention

Follow the instructions to ensure proper and safe operation. We recommend that the installation be done by a qualified professional. Recessed ceiling installation requires rigid support point attachment and special installations require special attachment.

### Important

Lamps, transformers, and reactors are not included with the product except as noted. Failure to follow the instructions in the manual could result in accidents and loss of warranty. Do not adjust springs and brackets unless otherwise indicated.  
 Warranty: 1 year for product and 5 years for Led and Driver.

### Cleaning and Maintenance

Before any action turn off the electric current. Clean only with water dampened flannel, never use chemicals or abrasives. The materials that make up the product are non-toxic.