



1° Press one of the springs allowing the removal of the rim supported at the three points.

2° Fix the base to the ceiling with dowels and screws (already included) using the fixing holes.
 3° Make the electrical connection
 4° Fit rim 1 into rim 2
 5° Raise the rim 2 and press it until it fits into the springs again

**To change the LEDs
 6° Turn the cap until the rod reaches the fitting detail

7° Loosen the screws of the LED base
 8° Remove the rivets and remove the LED
 9° Take off the LED and paste the new one

ML-2268 Ø18 1/2" x 4" 120/277V **Power Max:** 24W **Weight:** 2.88 lbs
ML-2269 Ø23 5/8" x 4" 120/277V **Power Max:** 30W **Weight:** 4.76 lbs

Attention

Follow the instructions to ensure proper and safe operation. We recommend that the installation be done by a qualified professional. Recessed ceiling installation requires rigid support point attachment and special installations require special attachment.

Important

Lamps, transformers, and reactors are not included with the product except as noted. Failure to follow the instructions in the manual could result in accidents and loss of warranty. Do not adjust springs and brackets unless otherwise indicated.
 Warranty: 1 year for product and 5 years for Led and Driver.

Cleaning and Maintenance

Before any action turn off the electric current. Clean only with water dampened flannel, never use chemicals or abrasives. The materials that make up the product are non-toxic.